



# INSTRUCTIONS

## Alternator Pulley

### Please Read These First

These instructions are intended as a guide only and are not a substitute for a workshop manual. The fitter must have a degree of mechanical competence. If you are in any doubt as to your ability to fit the part, do not undertake the job.

For more Technical Tips and to register your warranty online visit

[www.smpe.co.uk](http://www.smpe.co.uk)

Contact technical sales on

**01527 839307**

[www.smpe.co.uk](http://www.smpe.co.uk)

FuelParts<sup>UK</sup> Intermotor 

## Alternator Pulley

It is recommended that the correct tool is used to remove/replace the alternator pulley. These are available as a separate part (RET\*\*\*). The tool will make the job easier and enable the correct torque settings to be used.

We do not recommend the use of air tools to remove/install alternator pulleys, damage to both the pulley and the alternator may result in their use.

### Renewing the pulley

1. Disconnect the battery.
2. It is often necessary to remove the alternator to gain access to the pulley, follow manufacturers specific procedures to do this.
3. Remove old pulley.
4. Fit new pulley.
5. Tighten to correct torque setting as recommended in workshop vehicle specific data
6. Check the pulley for free running
7. Reinstall alternator, refit/retention drive belt.
8. Connect battery

### Note

Check alignment of drive belt before restarting the engine

